

User Manual



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

Content

Product Function	1
Product Introduction	1
Power Cable Instruction	1-2
Remote Control Function	2
Operating Instructions	2-3
Accessories	4
Product Maintenance And Troubleshooting	4-5

1. Product Function

Product function introduction

- 1.7 " /10.1 " TFT LCD digital panel, 16: 9 display
2. Resolution: 1024 RGB*600
3. Back light: LED, luminance: 300 cd/m2
4. System: PAL&NTSC automatically
5. AV input: 4 channels 720P or CVBS input, 1 channel audio input
6. Triggers: 4 channels, trigger delay can be set
7. Image display: 1/2/3/4 image display adjustable
8. Power supply: DC12-24V
- 9.OSD menu. remote control

2. Product Introduction


Front

- | | |
|--------------------|-----------------|
| 1. Sun shade | 7. CH2 |
| 2. Bracket knobs | 8. Power |
| 3. U shade bracket | 9. CH3 |
| 4. LCD screen | 10. CH4 |
| 5. Menu | 11. Mode switch |
| 6. CH1 | 12. R/C window |



- | | |
|--------------------|-----------------|
| 1. Sun shade | 7. CH2 |
| 2. Bracket knobs | 8. Power |
| 3. U shade bracket | 9. CH3 |
| 4. LCD screen | 10. CH4 |
| 5. Menu | 11. Mode switch |
| 6. CH1 | 12. R/C window |


3. Power Cable Instruction

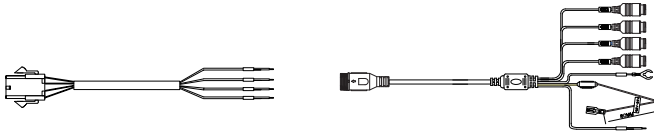

1. Red electronic wire: ACC-key switch
2. Black electronic wire: GND
3. Yellow electronic wire: DC 12-24V input
4. Brown electronic wire: Forward Wire(CH1)trigger display CH1;
5. Green electronic wire: Reversing Wire(CH2)trigger display CH2;
6. Blue electronic wire: Turning Lamp Wire(CH3)trigger display CH3;
7. Gray electronic wire: Turning Lamp Wire(CH4)trigger display CH4;


4. Remote Control Function

 1. "MODE" key: Switch to different display image
2. Power key: Startup or shutdown
3. "↑" key: Select up
4. "←" key: Select left
5. "MENU" : TFT menu
6. "→" key: Select right
7. "↓" key: Select down
8. "CH1" key: Enter into CH1
9. "CH2" key: Enter into CH2
10. "CH3" key: Enter into CH3
11. "CH4" key: Enter into CH4

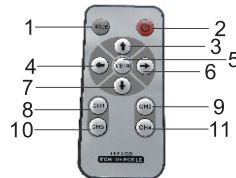

5. Operating Instructions


Main interface

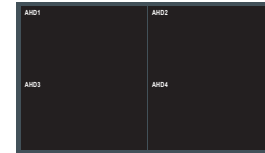


AHD1/AHD2/AHD3/AHD4 channel display.




Image adjustment menu.
To adjust the screen brightness, contrast, hue and saturation.

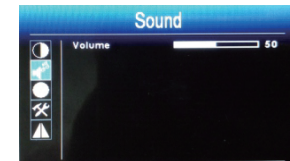

Volume adjustment menu.
1 to 100 adjustable.

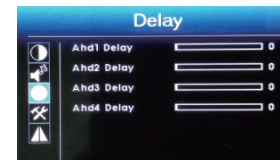

Reversing delay setting menu.
1-15 seconds adjustable.

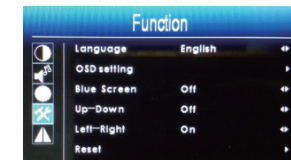

Basic function setting menu. To set the language, blue screen, turnover and reset.








Mirror/non-mirror and parking guide line switch for each Channel.

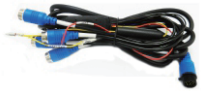

Channel select. Enter into the above menu, and set the channel according to the camera connected.

6. Accessories

Power cable*1PC 	Remote control*1PC 	M3 Hex Wrench*1PC 
4 PiN to RCA adaptor 1PC 	User Manual 1PC 	

7. Product Maintenance And Troubleshooting

Product maintenance

1. Do not install the product in the wet position.
2. Do not knock or rub products with hard objects to avoid failure or damage for product.
3. When the product needs cleaning, wipe the product surface with special cleaning liquid Do not wipe the product with corrosive liquid to avoid the paint falling or the product failure.
4. Turn off the power when you dont use the product

Fault phenomenon and troubleshooting

Phenomenon	Cause	Measures
Fail to boot	Fuse on power line or car battery fused , power supply voltage exceeding rated working voltage rang or illegal operation	Replace the correct fuse type; Adjusting voltage
Remote control has no effect	Power of battery ran out or battery error	Replace new batteries or reinstall batteries
No image	Incorrect connection or no connection	Check and correct connection

Remark :

Please refer to the actual function when it is different from the specification. We reserve the right of final interpretation of this product and without any notice if there is alteration. Please understand for any inconvenience!